


Closet Planning & Installation Guide

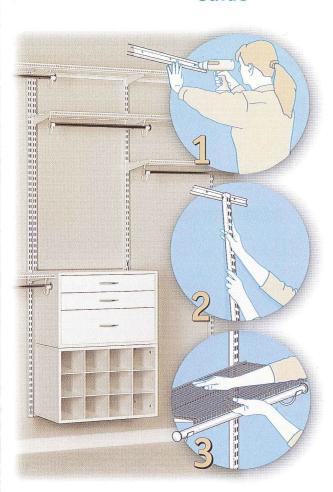

freedomRail® is the most innovative concept in home storage and organization. This high-quality adjustable system provides all the benefits of a custom closet while being easy to install, easy to adjust and easy to upgrade.

Once you experience the amazing ease of a freedomRail installation, you'll feel confident to tackle every closet in your home!

Easy to Install

Using a level and a drill, a novice Do-It-Yourselfer can attach the Rail to the wall. After that, all other components simply lock into place. No complicated instructions – no confusing parts and pieces. You'll be astonished at how quickly you can do this!

Easy to Adjust


All components are designed for a lifetime of use and re-positioning and the ease of adjusting encourages you to make changes. Reposition shelves to fit a growing child or move pantry shelves to accommodate a large blender. With the flexibility designed into freedomRail, these changes are a snap!

Easy to Upgrade


Place a Rail in every closet of your home and then choose from a variety of options to customize that storage space. Shelving can be Profile or wood. O-Boxes®, can be added to any closet for enclosed storage.

Now you can make your storage work for you.

Tools Required



Planning Guidelines

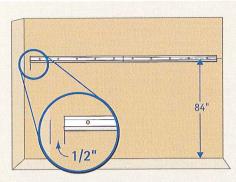

Rails: The primary support component of the system and the basis for a lifetime of storage freedom!


- Measure wall and subtract 1" to establish Rail length. Allow 1/2" on either side of Rail.
- You may combine smaller size Rails or you may cut a long Rail to fit your measurement.
- Patented Anchor system means there is no need to measure or align with stud locations.



Rail Hardware: Patented Anchor system - no need to locate studs.

- The Rail is installed using Screws and Strong-Loc[™] Anchors every 8".
- Each Hardware package provides 6 Screws and Anchors.
- Each size Rail has the number of mounting holes shown below.

Rail	24"	40"	64"	80
Holes	3	5	7	9

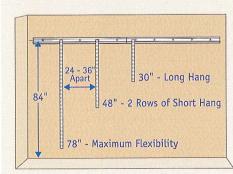

Uprights: Slotted channels provide a multitude of adjustability options.

- Vertical options:
 78" maximum flexibility, best long-term choice.
 - 48" supports 2 rows of short hang. 30" - supports 1 row of long hang.
- Horizontal spacing:
 36" apart for normal closets.
 30" apart for pantries.
 24" apart for O-Boxes.

Installation

The Rail

Measure up 84" from the floor.
 Use a Level to draw a level

line at this height.

Place the Rail on the wall so this line is visible through the mounting holes. Make a circle at each hole.

No need to align holes with studs.

• Drill each mounting hole with a 5/16" drill bit. If you do hit studs, use 5/32" drill bit to make a pilot hole. In this case, you will use the Screw only - no Anchor.

- Tap plastic Anchors into 5/16" holes.
- Place Rail over Anchors, twist in several screws to hold Rail.
- Insert and tighten all screws with a power drill. IMPORTANT: Allow screw to turn 6-8 full rotations after it is flush with the Rail so that the Anchor tightens into a ball behind the drywall.
- Place Cover Stickers over each screw head.

Uprights and Brackets

- Insert Uprights onto the Rail at appropriate spacing intervals (refer to Planning Guidelines).
- Insert Brackets into Uprights at appropriate shelf heights (refer to Planning Guidelines).

Rod Clips


- Rod Clips are placed into brackets prior to installing shelves.
- Insert Rod Clips into the Bracket and pull downward until you feel it snap into place.

Hanging Rod and Rod Stops

- Spin the flange on the Rod Stop until it is halfway up threaded shaft.
- Push Rod Stop into Rod; then twist the Stop until it tightens.
- Place completed Rods onto Rod Clips.
 Pull downward until they snap into place.





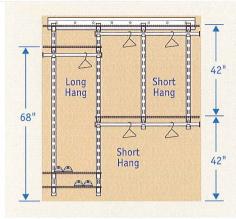


Shelving: Several styles for easy customized solutions.


- Heavy duty Profile Shelving in 12" or 16" depths.
- 14" deep Melamine Shelving for a custom closet appeal.
- All shelving comes in 2, 4, 6, and 8 foot, pre-cut lengths.
- Shelves may extend up to 9" beyond Uprights and Brackets.

Shelving (Profile)

 Lay Shelf onto Brackets with center Shelf rod positioned atop center bracket notch.



- Push down on center Shelf rod. Then lift the front edge and slide the Shelf back.
- Shelves may be cut to fit exact measurements using a pipe cutter; apply End Caps to edges.

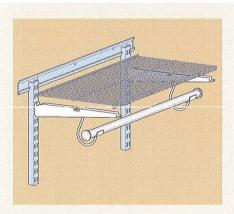

Brackets and Rod Clips:

Heavy-duty construction for a lifetime of use and adjustability.

- Choose Ventilated or Solid Shelving Brackets depending on the type of Shelf used.
- Rod Clips provide a secure connection between the Bracket and Hanging Rod and do not interfere with hangers sliding along the Rod.

Hanging Rods and Rod Stops: Upscale appearance; hangers slide


• Hanging Rods may be mounted under any Shelf.

Shelving (wood)

Shelf Locators attach Wood Shelves to Wood Shelf Brackets.


• Place two Shelf Locators into each bracket. Remove double stick tape.

- Place Shelf onto Bracket in desired position and press to adhere to Locators.
- An optional Screw is provided with Shelf Locators if a fixed connection is desired.



O-Boxes®

- Uprights are spaced 24" apart for O-Boxes. Insert the O-Box bracket into the inside slot of each Upright.
- If installing a stack of O-Boxes, install bottom O-Box first.
- If installing O-Boxes side-by-side, each O-Box will use its own set of Uprights.

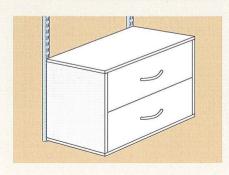


O-Boxes®


effortlessly.


Great organizers that customize any freedomRail closet!

- O-Boxes are 24"W x 16"H x 14"D and are supported by Uprights that are 24" apart.
- May be mounted at any height along the Uprights, from the top to the bottom.
- Offered in a variety of styles and sizes, each packaged with all necessary Hardware.

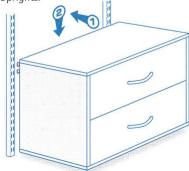

Closet Ideas

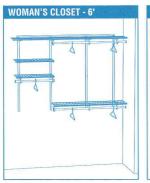


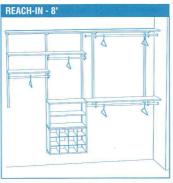








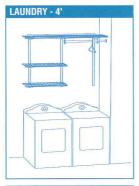





freedomRail.

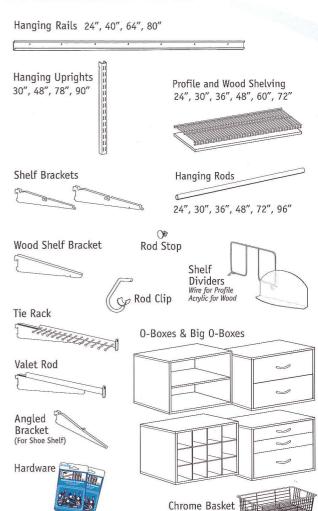

6 & 13" heights